

level

Care & Cleaning Guide: Nexa Acoustically Transparent Fabric

Before You Begin

Do not use abrasive cleaners containing chlorine bleach, solvents, or ammonia, as they may damage the surface and alter the integrity of the printed design.

WARNING: Never mix cleaning agents together, volatile reactions may occur!

To Properly Clean Everyday Stains

Because polyester fibers absorb virtually no moisture, spots and stains stay on the surface of yarns and can be easily removed. For best results, follow the steps listed below. Always treat stains promptly when possible.

- Spots from dust and other loose particles should be removed from the fabric surface by use of a commercial vacuum.
- Brush dry stains off with a soft nylon brush. Many times this will be all that is necessary to get a good result.
- Blot wet stains with a clean absorbent cloth to wipe away as much as possible.
- If stain is not removed, use a cloth and warm water, and a soft brush if necessary, to loosen the stains. Brush in both directions working outside in and use a minimal amount of water to avoid saturation.
- If stain is not removed with warm water, use a common detergent with warm water, brush if necessary. Avoid saturation. Rinse with warm water and blot the area dry with a clean dry cloth to prevent resoiling.
- If stain is still not removed, it most likely is an oil-based stain. Some examples are: permanent ink marker, shoe polish, lipstick, hair dye, paint (oil), make-up, furniture polish, nail polish, etc. Commercially available cleaning solvents may be used to loosen the stains from the surface of the yarn. Apply with clean cloth or soft brush. Use sparingly to avoid saturation to the backing. Rinse with water and blot the area dry.

Repeat these steps as often as necessary for complete removal of stains.